

CLICK SYSTEM SPC INSTALLATION

MPAC

Þ


BETTER FLOOR






CLICK SYSTEM SPC INSTALLATION

Easy To Engage

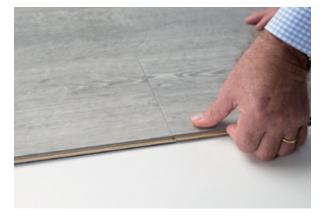

01: Start by engaging the plank on the long side (angle-system)

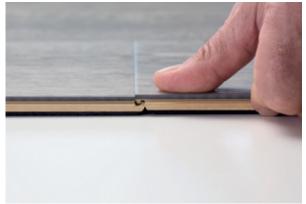

02: Slide the plank unit it reaches the short side of the next plank.



03: Let the plank drop gently





05: Continue pressing until you hear the "Click" sound of the drop-click lock system

04: Press with your thumb on both ends of the short side



06: Planks are now fully inter-locked





CLICK SYSTEM SPC INSTALLATION

Easy To Disengage



01: Always start by disengaging on the long side



02: Grab the plank with both hands and gently lift until the plank disengages



03: Place the planks gently on the floor



04: To disengage the short side, slide the planks in the opposite direction



05: Press the planks gently while sliding



06: continue sliding untill the planks are fully separated